
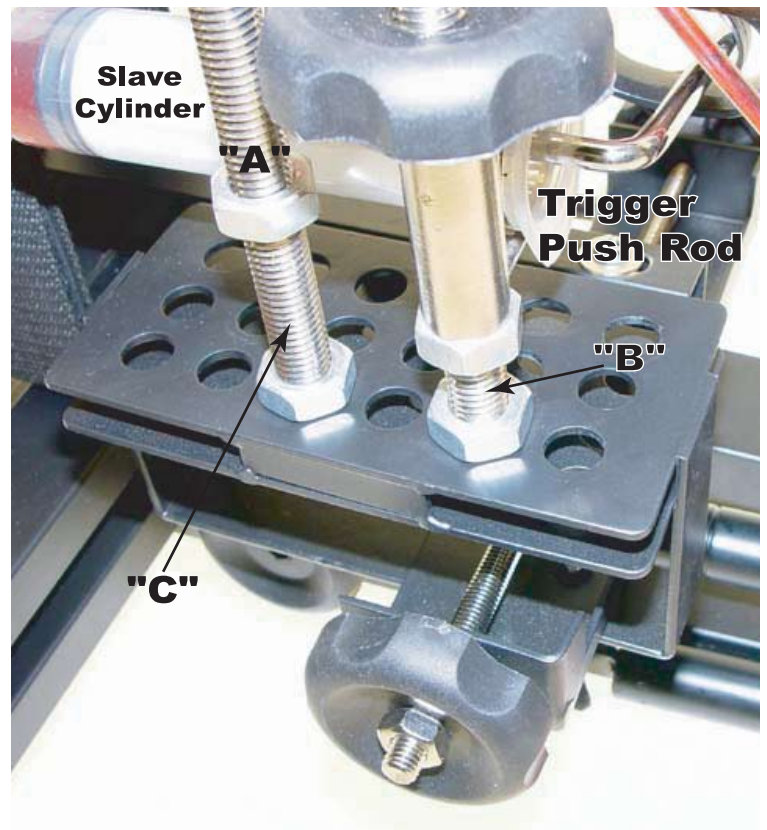


How To . . . Attach the Trigger Release

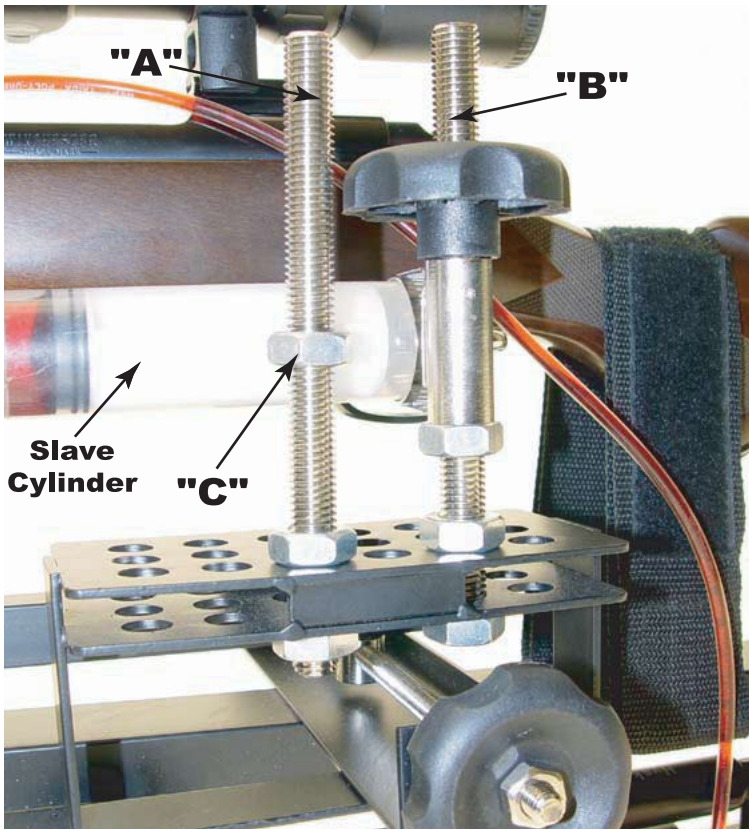

Setting up the Trigger Release:

- 1) Depress the plunger on the slave cylinder
- 2) Insert the Trigger push rod through the Trigger Guard in front of the Trigger.
- 3) Insert Bolt "B" through the mounting tube on the trigger release bracket. Put it through any set of holes that align properly and fix it into place locating the nuts & knobs as shown. Generally hand tight will be sufficient.
- 4) Locate Bolt "A" as shown, if necessary use Nut "C". This part acts as a spacer to keep the slave cylinder parallel to the gun. This way maximum pressure can be applied directly to the Trigger.