


# How To . . . Adjust

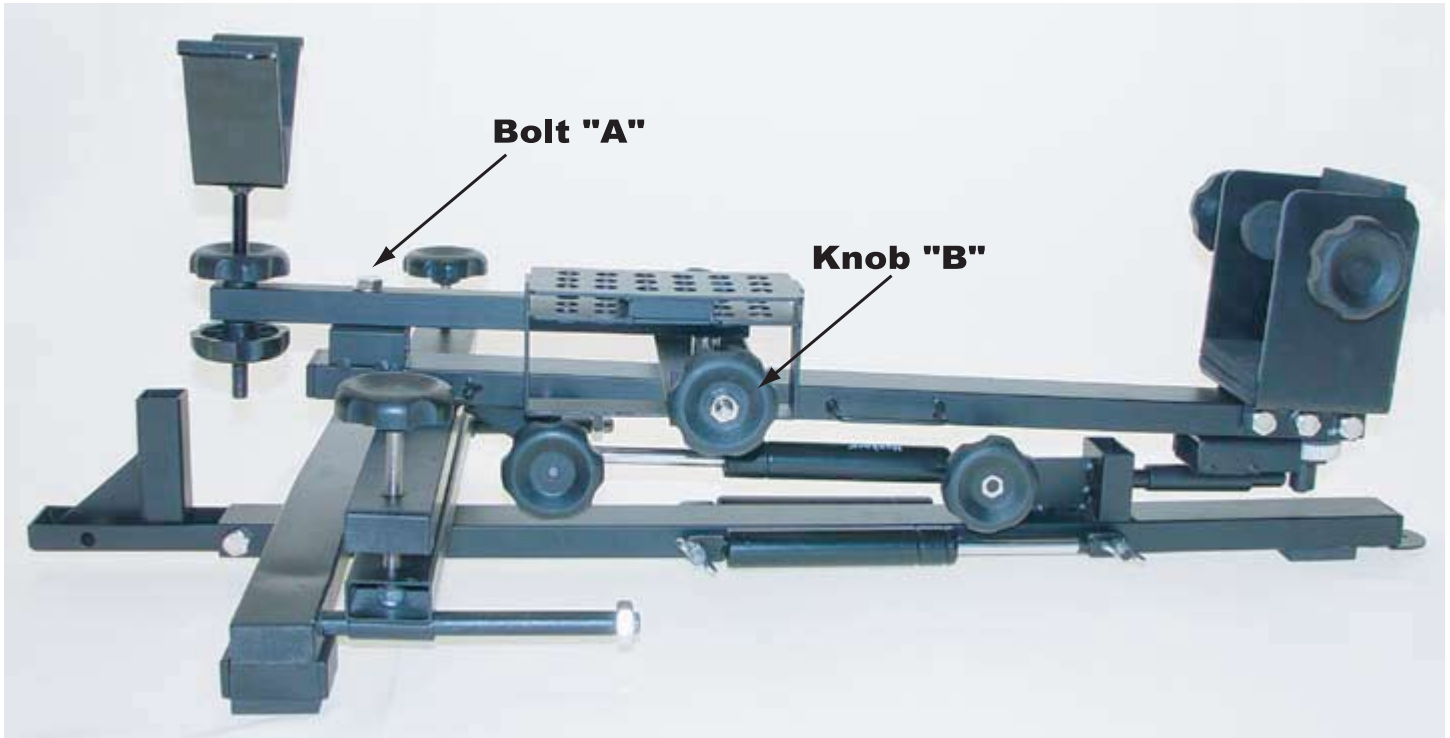

**Sometimes due to shipping and handling small amounts of play may develop.**

- 1) Check all fasteners in steps # 1 and # 2 of the instructions for proper tightness.
- 2) Bolt "A" should be snug (no play) but not too tight. As it must allow the windage adjustment to pivot.
- 3) Back off the retaining nut at Knob "B". Tighten the knob to within 0.5mm +/- (the thickness of a business card) of the bracket, then secure with the nut.